



# PNEUMATIC WIRE ROPE HOIST

## EHW-120

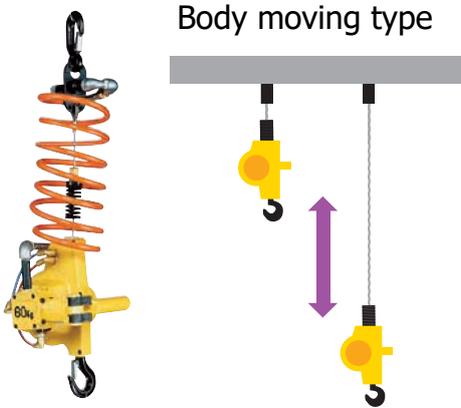

Body moving type

## EHW-120R

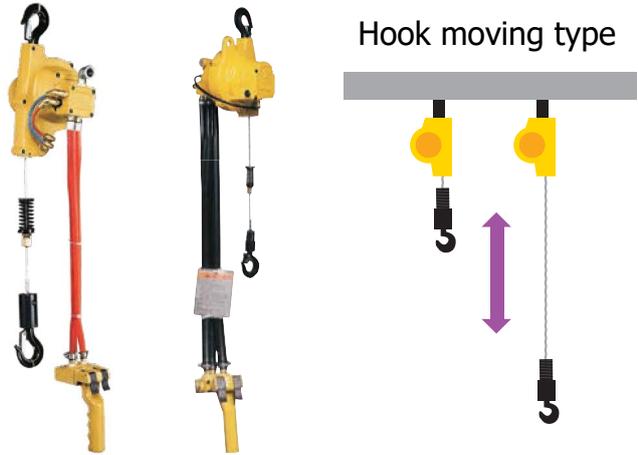

Hook moving type

## EHW-60 , EHW-120

### FUNCTION





Wire rope type



Button control



Plain trolley (on request)

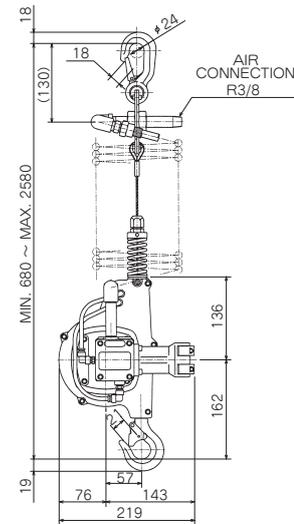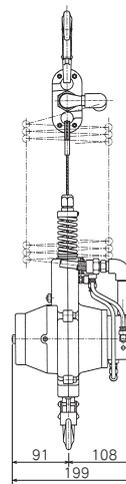

Model	Rated load (kg)	Stroke (m)	Air pressure MPa (kgf/cm <sup>2</sup> )	Lifting speed m/min	Air consumption m <sup>3</sup> /min (normal)	Air inlet	Mass (kg)
EHW-60	60	1.9	0.4 {4}	18.5	0.55	R 3/8	9.2
			0.5 {5}	22.5	0.7		
			0.6 {6}	26.0	0.88		
EHW-120	120		0.4 {4}	11.0	0.59		9.4
			0.5 {5}	13.5	0.75		
			0.6 {6}	16.0	0.93		

### Note

1. Install a filter and lubricator to the hoist as close as possible.
2. Both of cable extension and stroke extension are not available on EHW series and AH-250R.
3. Chain hoists are recommended for the frequent operation.
4. Application; Indoor -10°C~+50°C (Temperature)

Australia Wide Sales & Service

sales@materialshandling.com.au | www.materialshandling.com.au | 1300 65 00 35

**MATERIALS**  
**Handling** PTY LTD *Working with ease*

# PNEUMATIC WIRE ROPE HOIST

## EHW-60R , EHW-120R

### FUNCTION



Wire rope type




Button control



Plain trolley (on request)



Emergency stop button (on request)

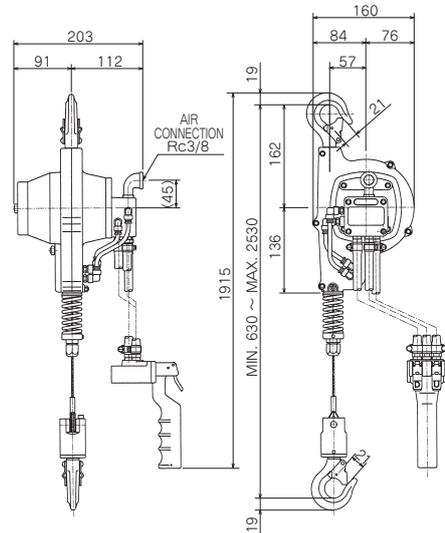

\*The Length of control hose is 1.5m.

Model	Rated load (kg)	Stroke (m)	Air pressure MPa {kgf/cm <sup>2</sup> }	Lifting speed m/min	Air consumption m <sup>3</sup> /min (normal)	Air inlet	Mass (kg)
EHW-60R	60	1.9	0.4 {4}	18.5	0.55	Rc 3/8	9.5
			0.5 {5}	22.5	0.7		
			0.6 {6}	26.0	0.88		
EHW-120R	120		0.4 {4}	11.0	0.59		9.7
			0.5 {5}	13.5	0.75		
			0.6 {6}	16.0	0.93		

### Note

1. Install a filter and lubricator to the hoist as close as possible.
2. Both of cable extension and stroke extension are not available on EHW series and AH-250R.
3. Chain hoists are recommended for the frequent operation.
4. Application; Indoor -10°C~+50°C (Temperature)