
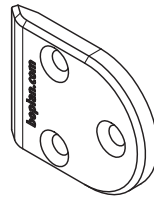


Safety Gate Closing Block - Black


SG1010/0104

INSTALLATION SHEET

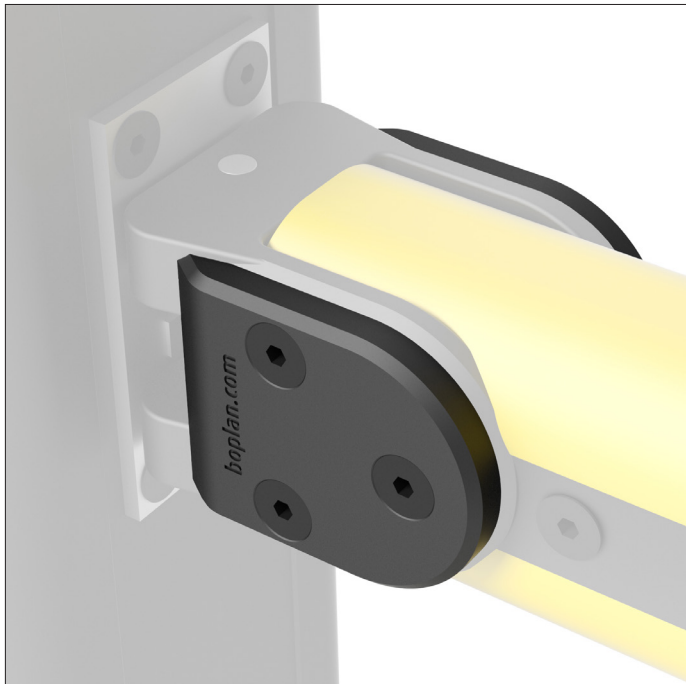


x2

Included:
Closing Block

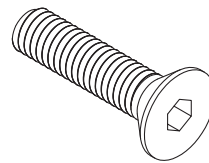


x6


Included:
BZK M6x25

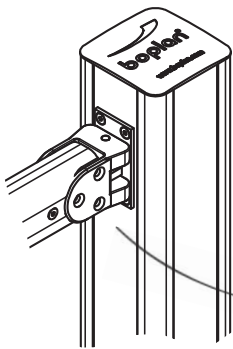


1 Unscrew current bolts on one side
(M6x16)

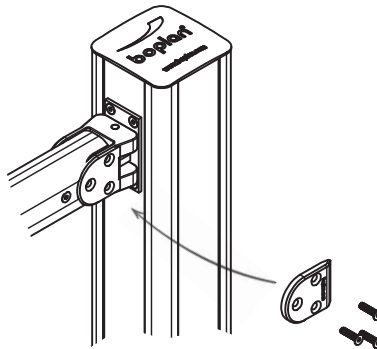


2 Install using supplied longer bolts
(M6x25)

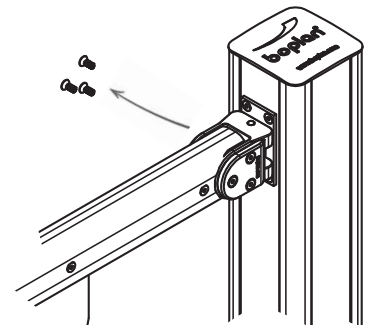

3 Unscrew current bolts on other side
(M6x16)

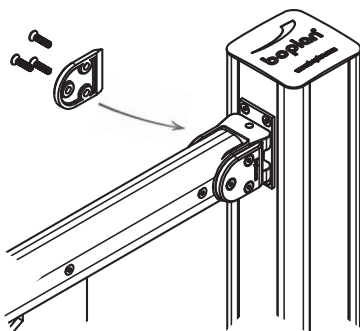

4 Install using supplied longer bolts
(M6x25)

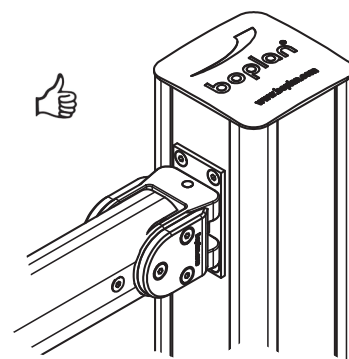

5



For more information, please visit www.boplan.com

