

# Elevating facts of Quick-Lift

## The intelligent extension of the human arm

Our goal has always been to create an extension of the human arm. With immediate response, the Quick-Lift effortlessly lifts up to 300 kg while maintaining precision and control.


## Precision manoeuvring by the touch of your hand

Our ergonomic control handle converts the movement of your hand into electronic signals. You only need to move the handle up or down a few millimeters to raise or lower the goods. The lifting device is literally of the human arm.

## Hands-on control with auto balance (float mode)

Auto balance (float mode) allows the operator to control the up and down movement by moving the lifting object up and down instead of using the operator control handle. The auto balance is used for exact positioning and precise placing (landing) by the touch of the operator hand providing control beyond gravity.



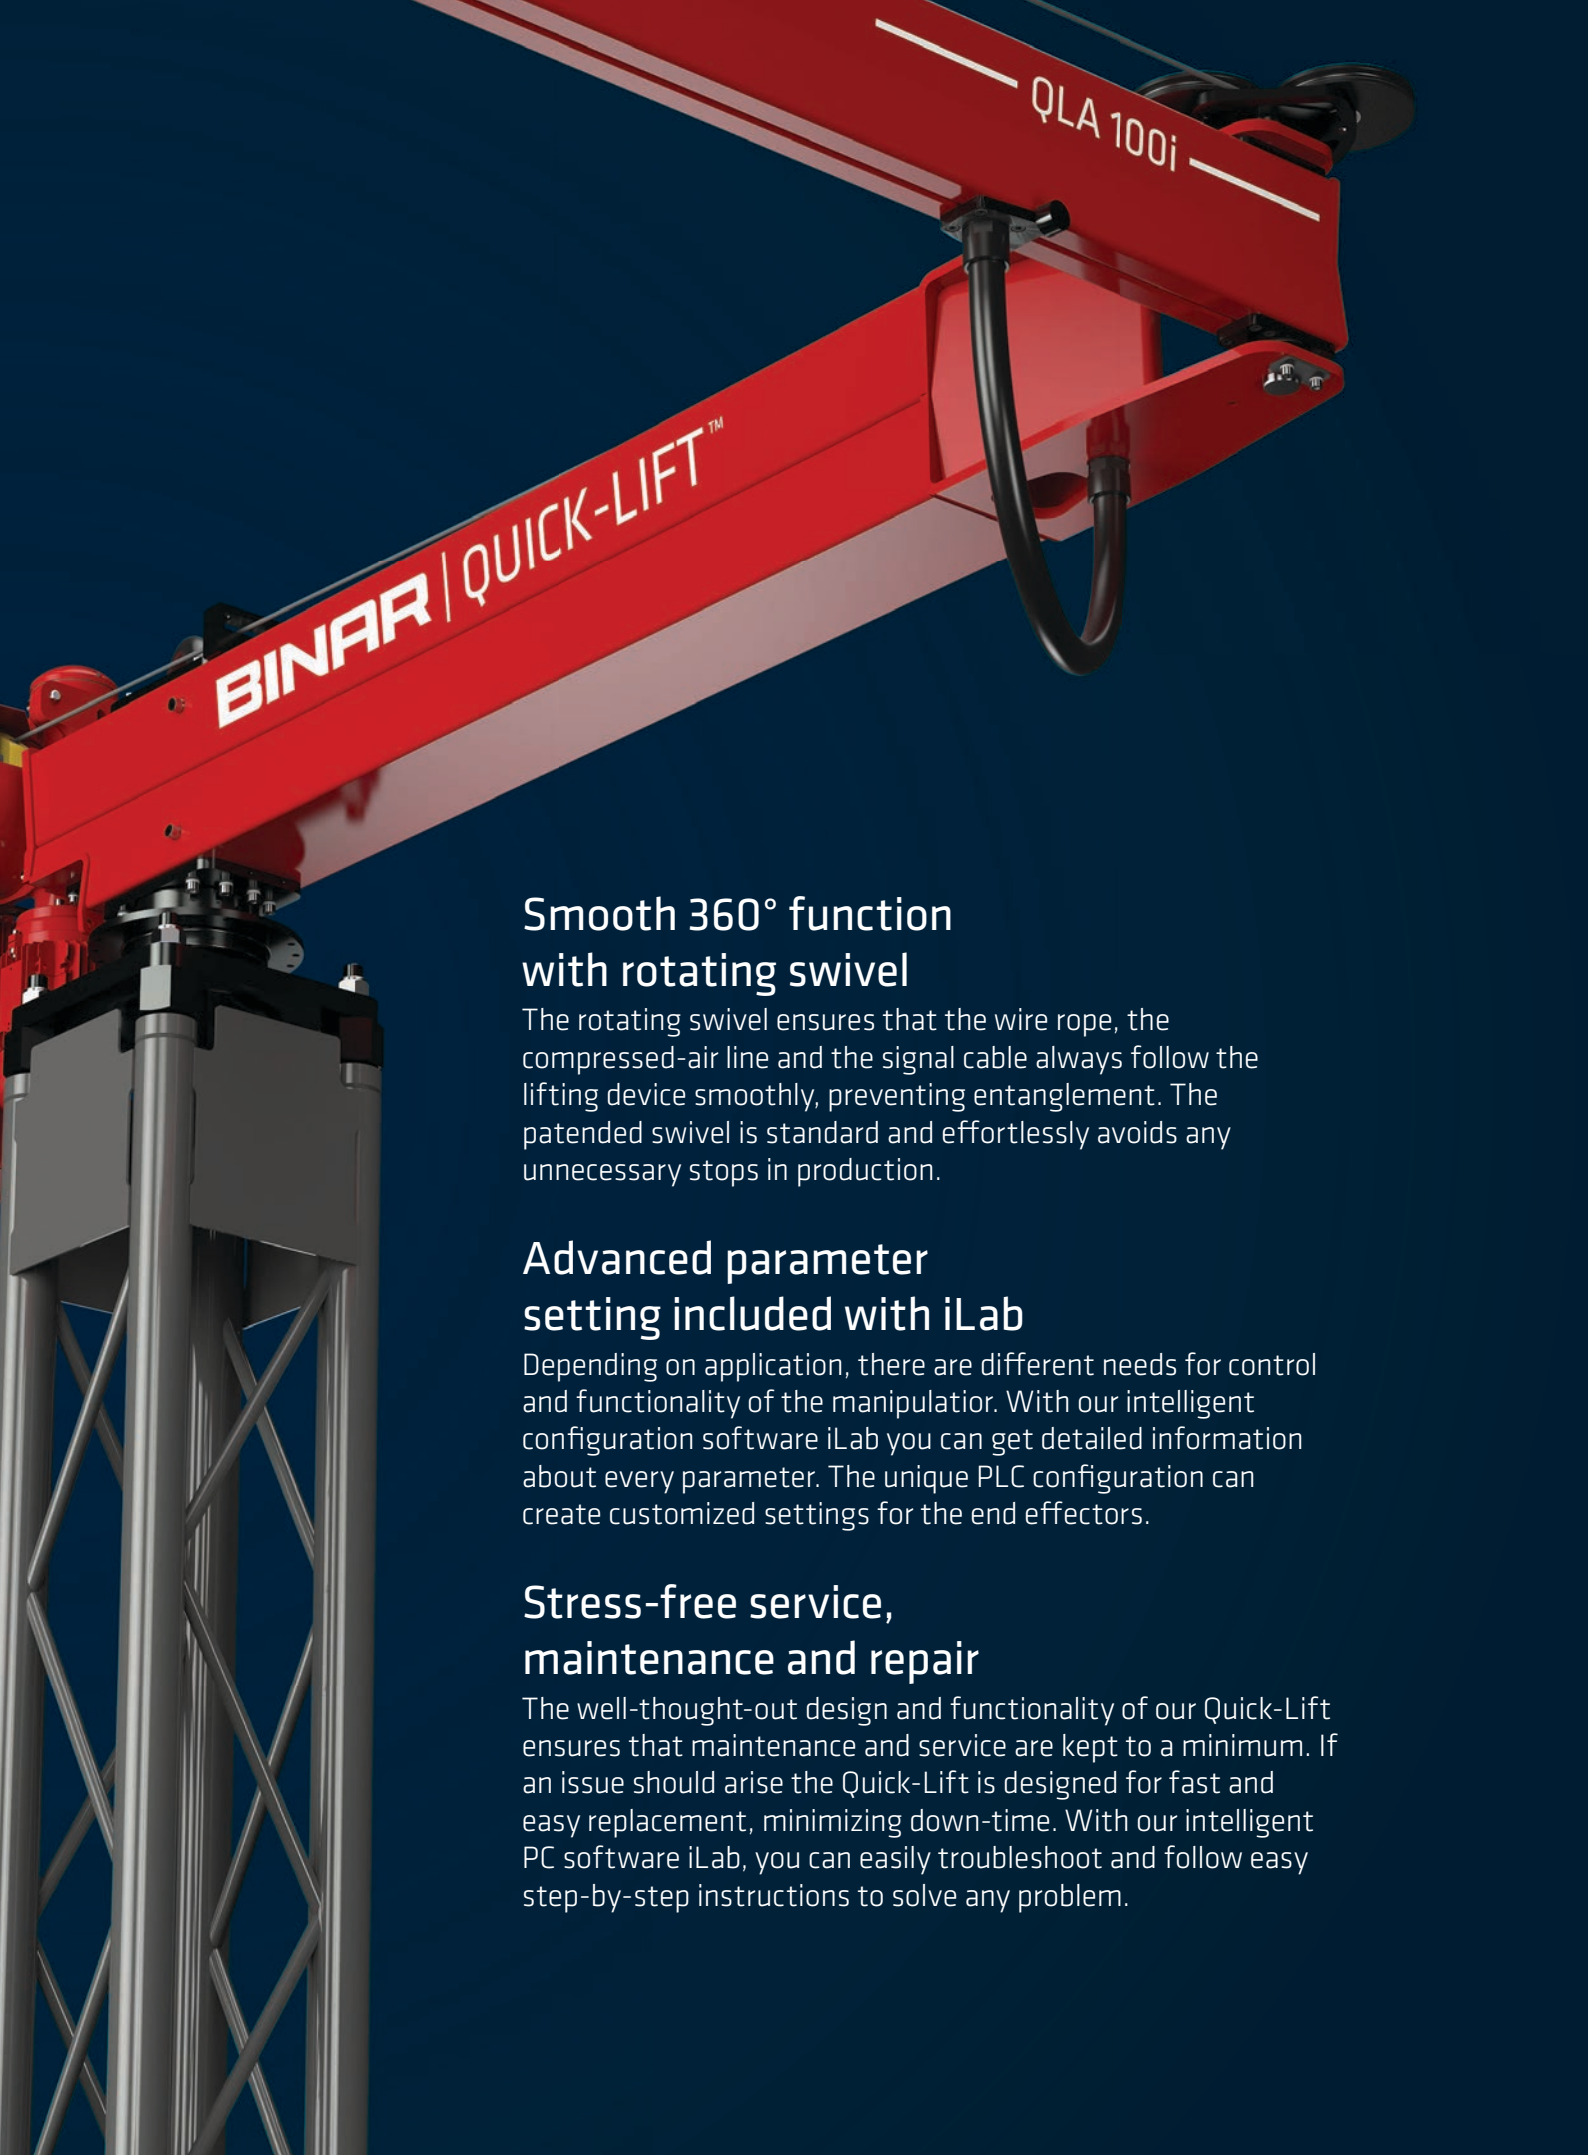

## Smooth 360° function with rotating swivel

The rotating swivel ensures that the wire rope, the compressed-air line and the signal cable always follow the lifting device smoothly, preventing entanglement. The patented swivel is standard and effortlessly avoids any unnecessary stops in production.

## Advanced parameter setting included with iLab

Depending on application, there are different needs for control and functionality of the manipulator. With our intelligent configuration software iLab you can get detailed information about every parameter. The unique PLC configuration can create customized settings for the end effectors.


## Stress-free service, maintenance and repair

The well-thought-out design and functionality of our Quick-Lift ensures that maintenance and service are kept to a minimum. If an issue should arise the Quick-Lift is designed for fast and easy replacement, minimizing down-time. With our intelligent PC software iLab, you can easily troubleshoot and follow easy step-by-step instructions to solve any problem.




# Smart way to handle things

Our grip-friendly control handle converts your hand's movement into electronic signals. Only one millimeter displacement of the grip is needed up or down, to raise or lower the material. The lifting device is literally an extension of the hand and arm and requires minimal movement to lift up to 300 kilos with compliance and highest precision.

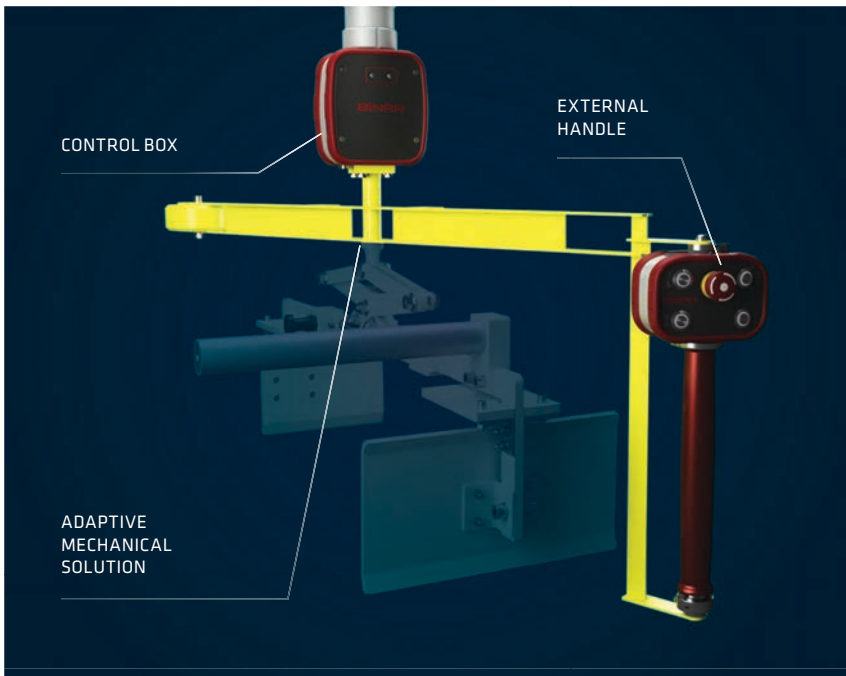

THE CONTROL BOX in combination with any external handle effortlessly handles large and heavy objects. The external handle comes in three lengths and gives full ergonomic flexibility. The adaptive mechanical solution controls any type of mechanical end effector.

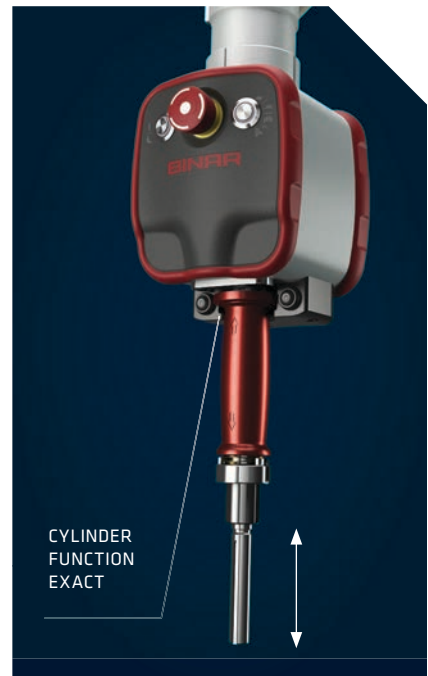

PLUG AND PLAY SOLUTION for controlling cylinder end effectors.



ADAPTIVE MECHANICAL solution to control any type of mechanical end effectors.



PLUG AND PLAY PNEUMATIC solution for controlling clamping end effectors.



PLUG AND PLAY VACUUM solution for controlling various suction cups.

## Quick-Lift Control Unit

Our ergonomic control handle converts the movement of your hand into electronic signals.

You only need to move the handle up or down a few millimetres to raise or lower the goods. The lifting device is literally an extension of your hand and arm, and minimal hand strength is required to lift up to 300 kg smoothly and with the highest degree of precision.

The control handle is available in several different configurations, and there is also a configuration where it can be split into two parts so that the operator's work posture is more ergonomic even when using large end effectors.


Instant precision	Great low speed functionality
Intuitiv interface	Error reporting on handle
Non drop	Supervises the weight of the end effector, ensuring that the operator never drops the load
Stop up	Supervises that the lifted object is gripped properly and limits lifting movement
Programmable speed	Monitor load and adjust speeds depending on load case
Auto balance (float mode)	Allows operator to move load directly on lifting object, no push button activation needed
Programable positions	iLab3 provides possibility to define top and bottom position
Dead mans grip	Quick-Lift stops once operator let go of control handle
Input / Outputs	Open inut and outputs for easy customization
Adaptiv load handling	Quick-Lift automatically, without any settings, adapt to any load in the hook
iLab3	Quick-Lift always delivered with intuitive and self explanation parameter setting program
Double command	Function for increase safety
Overload protection	Quick-Lift does not lift above rated capacity
Power loss protection	Fail safe bracking system in case of power failure
Quick-Start (installation)	Setup on handle



# Strong arms in a light way

The Quick-Lift arm model line includes electronic lifting capacity up to 300 kg. Our arms made of ultra high strength steel give you the lightest and strongest solution, combining productivity and ergonomic smartness. By mounting the Quick-Lift Arm in the ceiling, on a pillar or on the wall you also create a flexible, safe and ergonomic work environment when there is limited floor space.




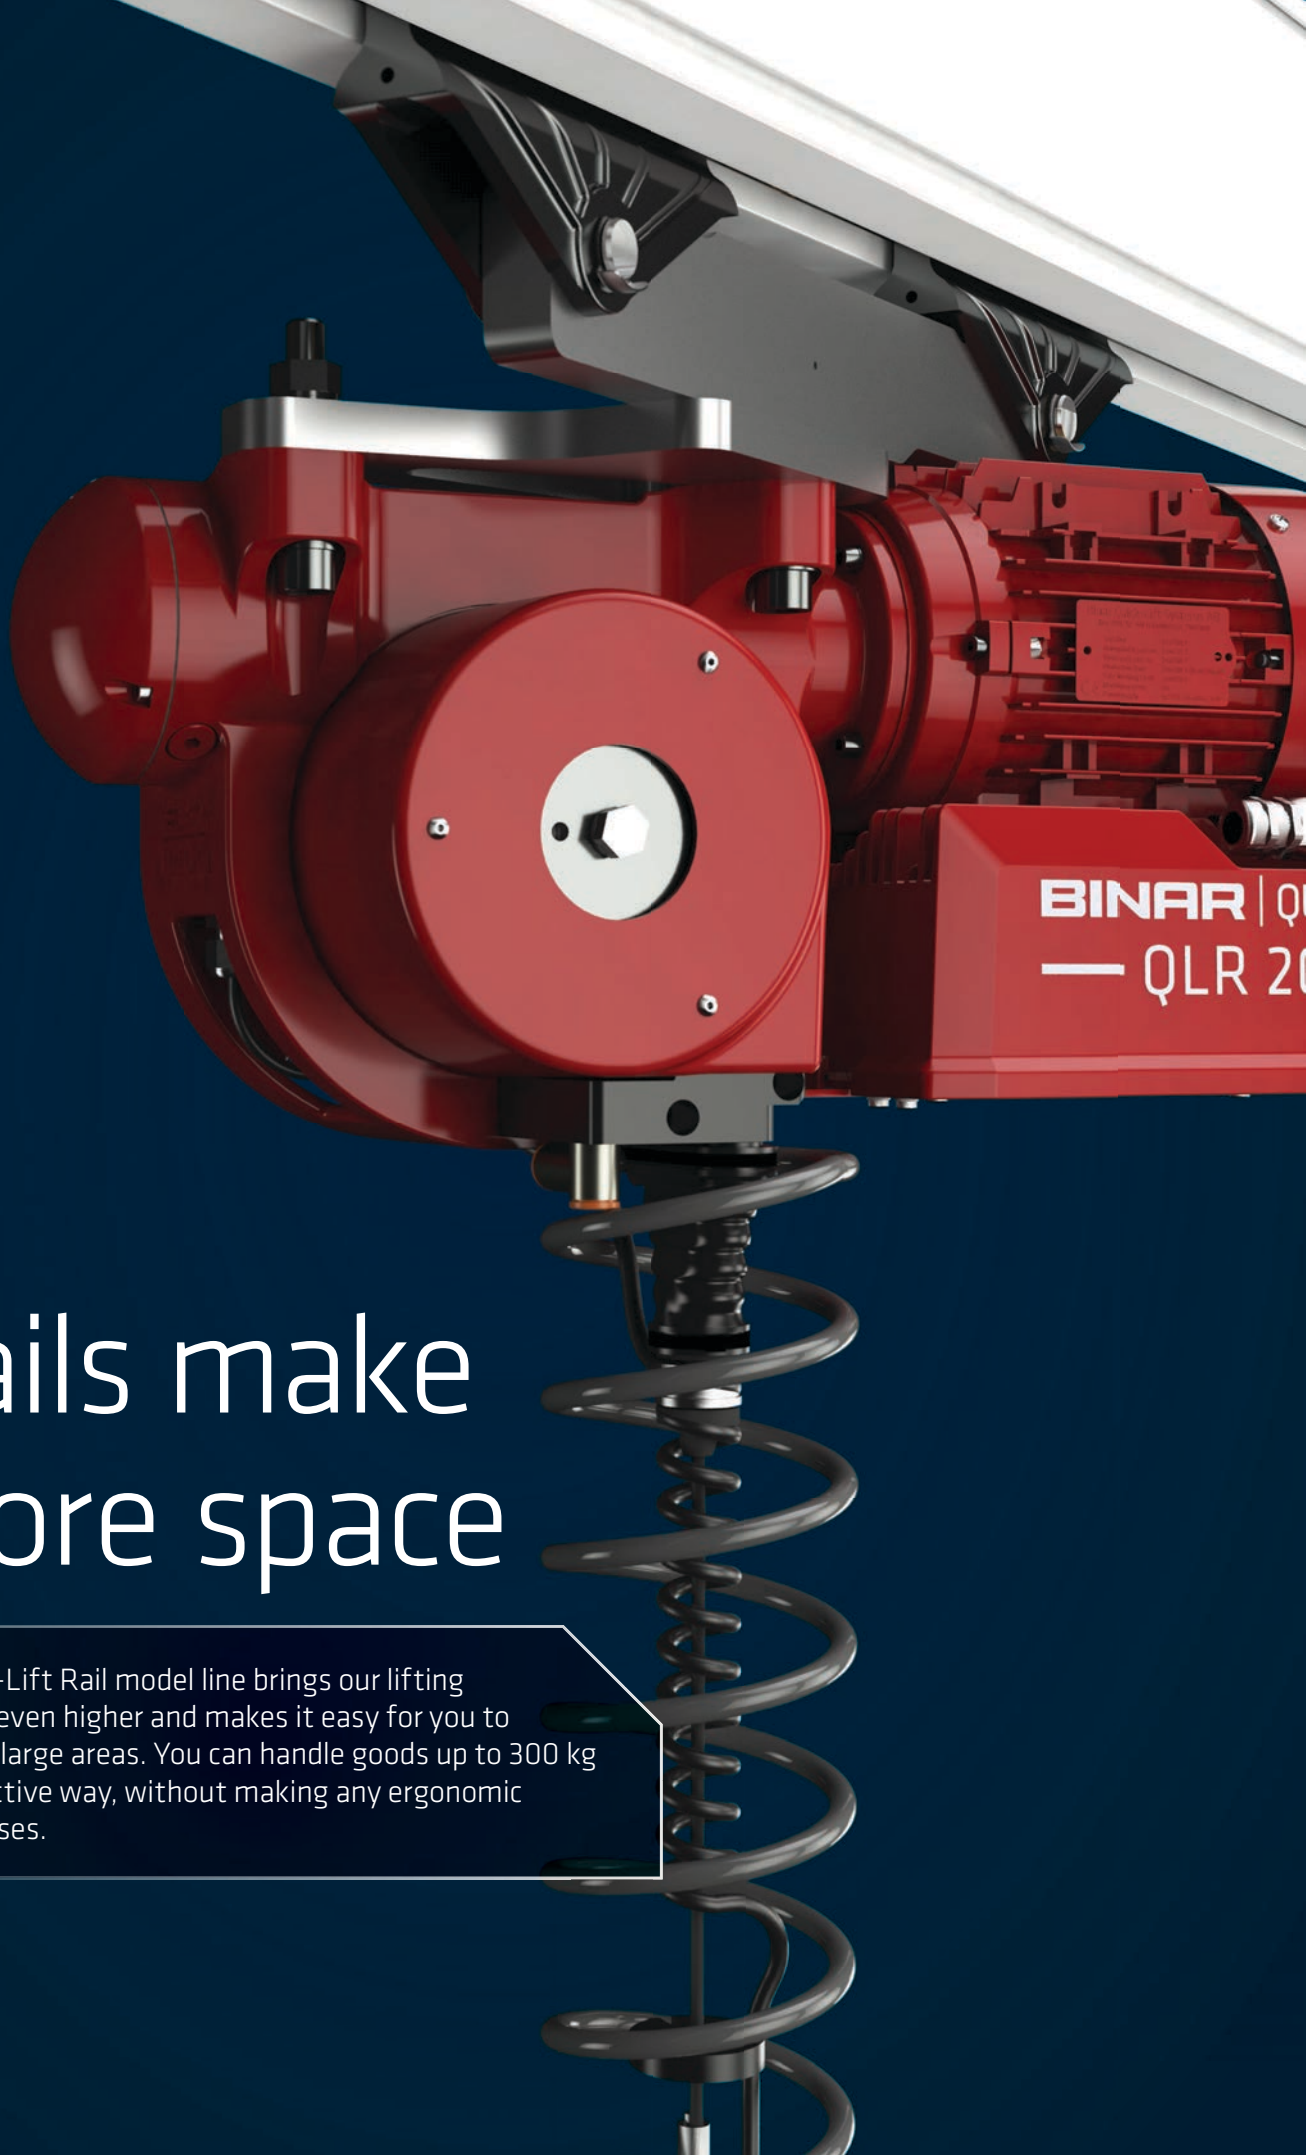

**BINAR | Q**  
**— QLR 20**

# Rails make more space

Our Quick-Lift Rail model line brings our lifting expertise even higher and makes it easy for you to work over large areas. You can handle goods up to 300 kg in an effective way, without making any ergonomic compromises.

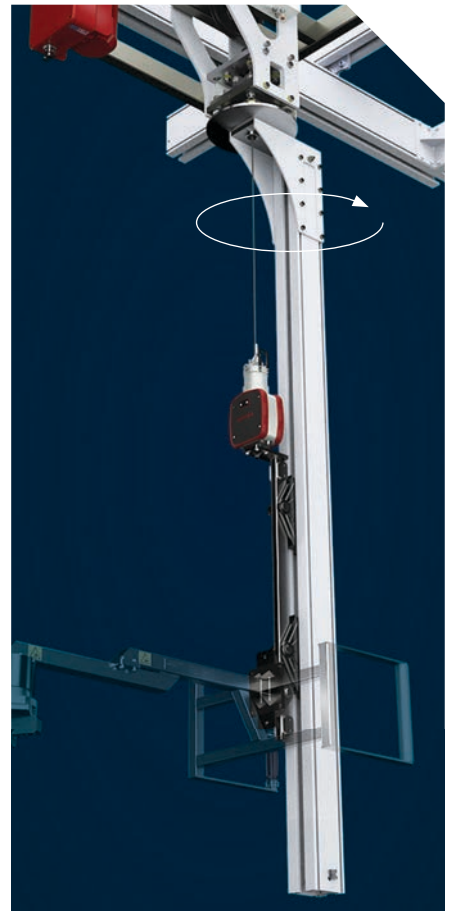

TO ENSURE OPTIMAL ERGONOMICS, the wire rope feeding is limited during movement of rail system.

WHEN NEEDED, a torque application is available.



OPTICAL SENSORS adjust the movement with exact precision.



HEAVY LOADS (up to 300 kg) are effortlessly lifted by the slightest movement from the operator.

## Quick-Lift Rail

Our rail solutions are available in Quick-Lift Rail (QLR) and Quick-Lift Driven (QLD). Quick-Lift Rail is a rail-mounted equipment, freeing up floor space. Manual movement in the X and Y axes makes it easy to work over large areas. Vertical lifting is very smooth when using our precision control handle. Few moving parts keep service to a minimum.

Technical Specification	QLR 50i	QLR 125i	QLR 200i	QLR 300i	QLRT
Lifting capacity	50 kg	125 kg	200 kg	300 kg	350 Nm
Weight	25 kg	25 kg	41 kg	41 kg	140 kg
Stroke length	2,7 m	2,7 m	2,7 m	2,7 m	≤ 2,7
Overload protection	Standard (for all units)				
Auto balance	Standard (for all units)				
Stop and go - pneumatic brake	Optional (for all units)				
Power supply	230V +/-10%	230V +/-10%	230V +/-10%	230V +/-10%	230V +/-10%





# A most intelligent touch

The end effector completes the ergonomic lifting solution and ensures that the lift is safe, precise and efficient. We have manufactured over 5,000 different pneumatic, magnetic, mechanical or vacuum powered end effectors that can easily be combined with tilting and rotation functions.




**THE QUICK-COUPLING** mounts directly to the control handle. Hooks and other mechanical devices can only be released when unloaded.



**THE PARALLEL GRIP**, which switches between grip and release automatically every time placed down can easily be adjusted for several applications.



**THE ADJUSTABLE SCISSOR GRIPPER** can be used for many different lifting objects. Preferable with the Quick-coupling.

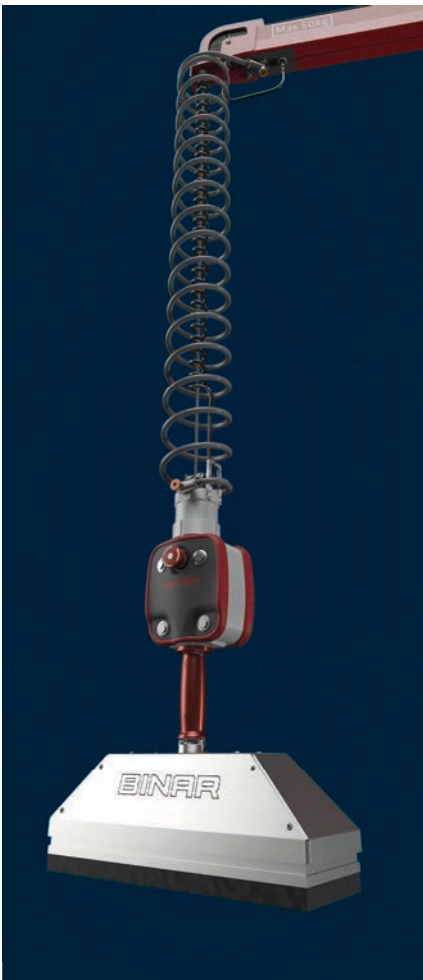

**THE VERSATILE END EFFECTOR** is a multipurpose vacuum for flexible or irregular surfaces.



**THE FIXED MAGNET** can handle loads up to 85 kg. Equipped with sensor for StopUp to secure load.



**THE TILTABLE MAGNET** end effector can handle loads up to 275 kg. Designed with 2-way rotation to always secure parallel lifting force.



**THE AXEL GRIP** handles shafts or other round bar material. Equipped with sensor for StopUp to secure the grip.



**THE 2-CUP VACUUM** is designed for handling glass or other flat surfaces. Equipped with a manual tilt.


## Quick-Lift End Effectors

In addition to our standard end effectors, we design special solutions entirely adapted to each item being lifted. The end effector completes the ergonomic lifting solution and ensures that the lift is safe, precise and efficient. Even when making our initial sketches, the end effector is a central part of the solution and can easily be combined with tilting and rotation functions.



# Customized is standard with us

Every problem has its solution. We are intrigued by the opportunity to come up with yet another intelligent customized solution for our clients. The way we go about it is optimizing the correlation of ergonomics and productivity in every step in the lifting moment.

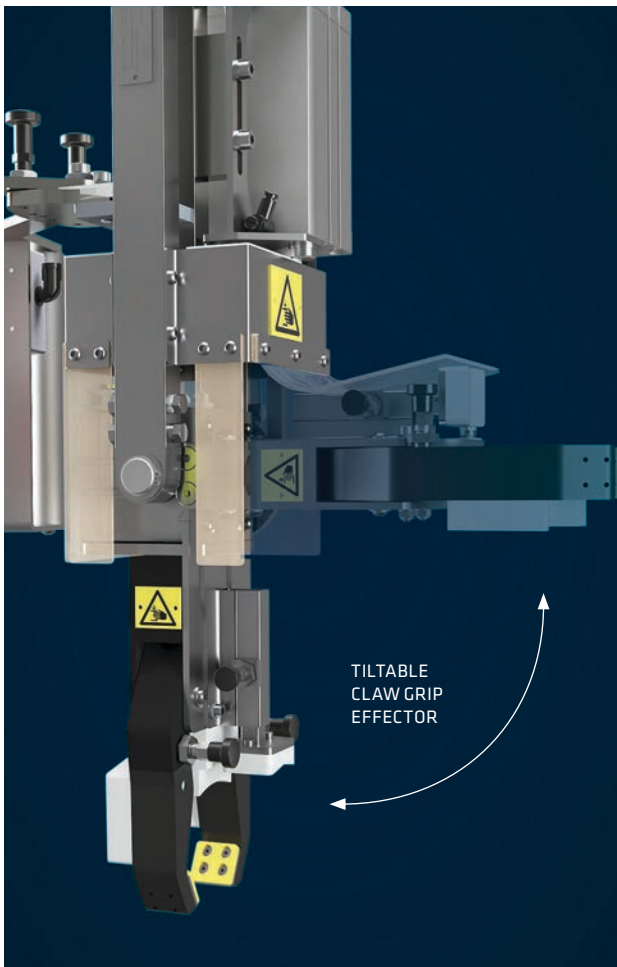

TILTABLE  
CLAW GRIP  
EFFECTOR

THE DEMAND FOR A TILT ELEMENT of large shafts with various dimensions lead to the innovation of a tiltable claw grip effector.


## CUSTOMIZED SOLUTIONS

# Shaft End effector for shaft handling

THERE IS A WEALTH OF ALTERNATIVES to customize your Quick-Lift. In this example, we customized the lift system to work for our customer that needed shafts to be placed vertically in a crate. We adapted the claws of the end effector to work with shafts of different diameters. The grip of the shaft is activated using a pneumatic cylinder controlled by the push button on the red handle.


THE SHAFTS HAD TO BE PICKED UP laying horizontal on a pallet and then placed standing in a rack. The forward tilt is performed using a pneumatic cylinder controlled by push buttons located to the left of the red handle.

WITH THE CONTROL HANDLE, operators move the end effector up and down and control grip and release of the lifting object. For safety reasons, release is only available when the shaft is put down.

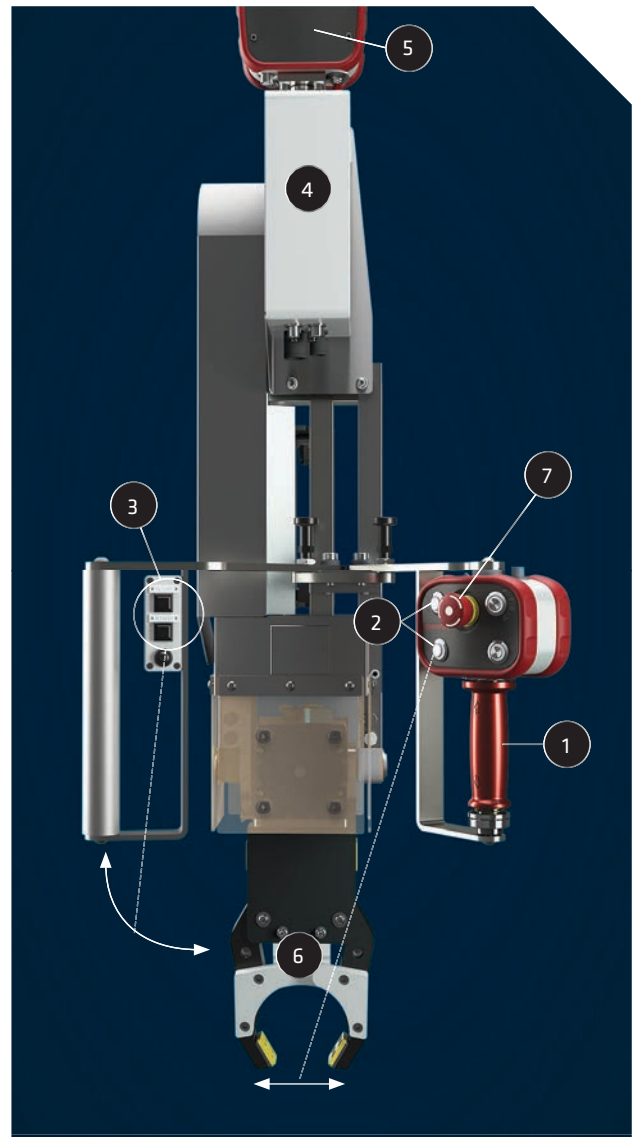

## Operator interface

1. Red control handle for up and down movement of the end effector. Up and down movement is created with the Quick-Lift mounted in the rail system above.
2. Push button (2a) on lower left side controls pneumatic cylinder that provides movement (2b) of the claws gripping the shaft.
3. Push buttons (3a) on left side controls pneumatic cylinder that provides tilt (3b) from horizontal to vertical position of shaft.
4. Electrical box including 1x5/2 valve for grip and release and 1x 5/3 valve for tilt. Tilt movement is only possible once push button is pushed.
5. Control box with pneumatic and electrical swivel.
6. Inductive sensor securing that shaft is in correct position before Quick-Lift is allowed to lift.
7. Emergency stop push button.



# Leading by example

Sometimes a good example itself proves the point. In this case, we highlight our development process that includes analysing the customer's needs and creating a custom lift solution.

## CASE STUDY

# Precise positioning of fly wheels with the Quick-Lift Arm 100i


**WE WERE CONTACTED** by a Swedish manufacturer of car engines. Due to a new order, they required a new work station to be installed. The work station had to interface with other pre-existing work stations and meet the high safety and ergonomic demands that the manufacturer already had in place.

**THE WORK STATION WAS PLANNED** to mount fly wheels. These operations are very difficult and only the most precise IAD (Intelligent Aided Lifting) can handle such operations. Additionally, fly wheels are very heavy and handling of these involves crushing hazard. Because of this, placing the end effector on the fly wheel required the security function of double hand command to activate grip.

**THE QUICK-LIFT WAS MOUNTED** on a Quick-Lift Arm 100i with a 5 meter arm, to cover a larger work station and allow the operator to retrieve fly wheels from several different pallets.

**ONCE PICKED UP, THE OPERATOR TILTS** the fly wheel using the pneumatic tilt on the end effector. The operator then has to define if the fly wheel is for diesels or petrol, pushing the activated buttons P or D. Depending on which button is pushed, the bottom position of the Quick-Lift is defined, resulting in an automatic stop at the precise, desired position.

**THE FLY WHEEL IS THEN POSITIONED** and entered upon a round guide flange where it is secured with multiple screws and tightened with a torque wrench. Once the torque wrench is okay, a signal is given from the PLC to the Quick-Lift to release the lock and allow removal of the end effector. The operator then moves back and restarts the application.

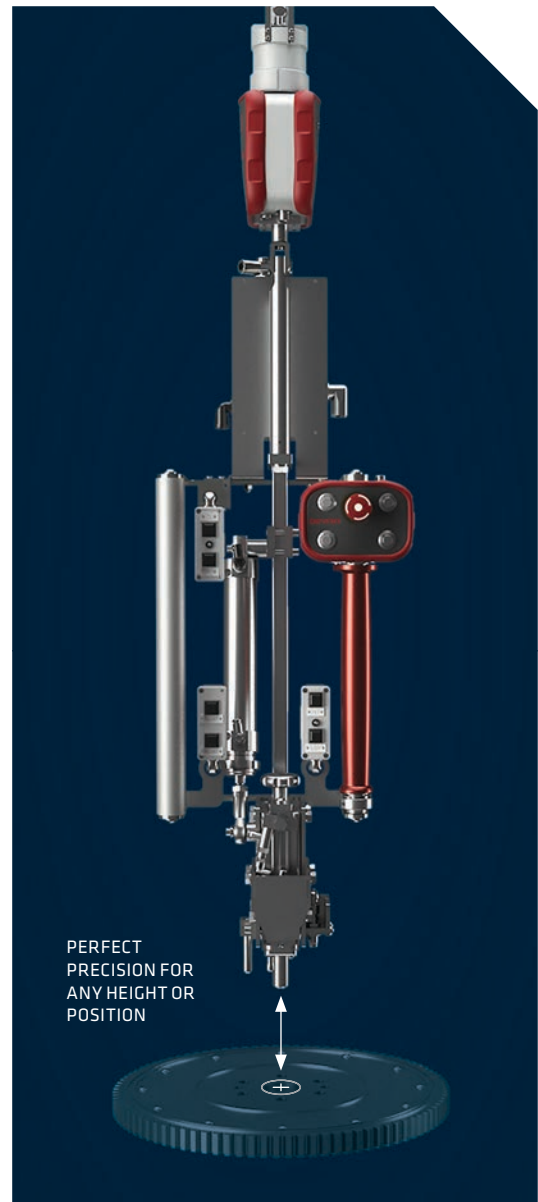

## iLab included

All Quick-Lifts are easily configured with our intelligent PC software iLab which comes as standard. With iLab, every parameter is easily adjusted, meaning every application can be customized to fit any need. iLab 3 comes with an event log which logs all actions in the system, providing a great base for maintenance and troubleshooting. The program is intuitive and offers helping instructions and explanations as well as proposed measures in the event of a halt. In addition, the program offers a tab that can create functionality in end effectors based on different conditions. These functionalities are restricted and only allowed when certain conditions are met.